

## SURROUND INSTALLATION

These instructions are for your safety. Please read through them thoroughly before use and retain for future reference. Failure to follow them could cause injury and/or property damage.

**Note:** This manual applies for a number of different products. Please make sure you follow the appropriate product guide lines.

This surround is floor-standing and must be fixed to a wall. Please ensure both the wall and floor are flat before installation. Always ensure there is enough room to place it.

Please ensure that there is an accessible electrical socket within reach of the supply cord. The electrical socket must not be behind or above the suite.

**WARNING!** Never cut off the plug and hard wire into a fixed fused spur

Before installing this product please take note that should removal or relocation of the product be necessary, any installation methods used may be left exposed.

**Note:** If fitting the product to plaster board with a cavity behind then propriety wall fixings (not supplied) will be required.

To secure the suite to the wall, follow the instructions below:



1. Attach a mirror clip to the back of each leg as shown using 4 x 16mm screws. Pre-drill the holes to stop the MDF splitting.

2. Place the surround to the wall, and mark the positions of the remaining holes on both mirror clips.

**Note:** Check the wall does not have any wiring or pipe work behind where you intend to drill.

3. Using an electric drill (6mm bit), drill holes into the walls approximately 35mm deep.

4. Insert the wall plugs, then secure the suite with 2 x 32mm screws (supplied).

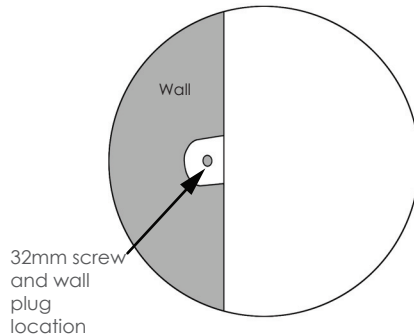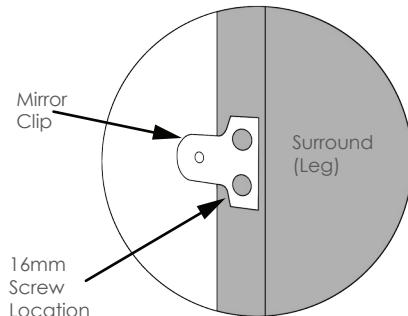

# Adam

SURROUND INSTALLATION

[www.adamfires.co.uk](http://www.adamfires.co.uk)