

Wooden Surrounds

Easy Fixing instructions



Tool list

Screwdriver

Drill to attach surround to the wall

Tape measure

Mirror clips and screws to attach to wall

Part List

3 piece wooden surround

Left and right leg

Front fascia and mantel


Screw pack consisting 12 @ 3.2 x 32mm counter sunk Pozi screw

Step One

Attaching the front legs to the mantle top

Remove legs from packaging and stand upright with unstained side facing you

Attach the combined front fascia and mantle into slots as shown below ensuring the distance between the legs at the top and the bottom remain the same. Screw the fascia/mantle to the legs using the 5 @3.2 x 32mms screws as shown below

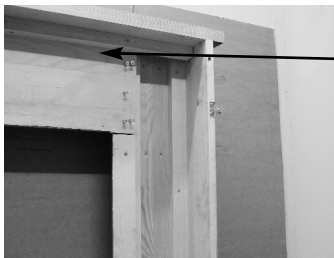


Slots for attaching the mantle top

Step Two

Secure the mantle in place using one of the remaining 3.2 x 32mm screws into the predrilled holes as shown in diagram above

Attach the mantle top using the remaining screws and attach mirror clips(not supplied) as shown in diagram below

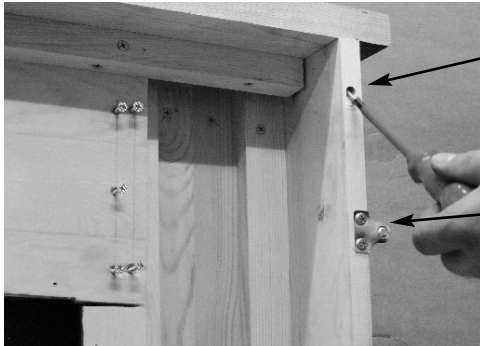

Pre drilled screw holes for attaching the mantle top

Finishing tips

Mirror clips can be used to secure your surround to the wall

To clean your surround, we recommend a damp cloth, do not use abrasive cleaners as these could damage the finish



Please Note: If you need any further advice or any spare parts for this item, please contact our customer service help line on **0870 224 2811** or e-mail helpline@adamsurrounds.co.uk for assistance